



**EVERYDAY CARRY  
LIGHT**

**OWNER'S MANUAL**

LT-ELEDC01

## CAUTION!

If you need to mount the flashlight onto a firearm, make sure firearm is not loaded before installation. Remove magazine and examine chamber. Use safe handling procedures at all times.

Tactical flashlights produce substantial heat during operation. Do not leave activated flashlight unattended. Do not set activated flashlight face down. Do not place activated flashlight against combustible material or material that could be damaged by heat. Do not hold bezel or lens of activated flashlight against any portion of human body. Keep away from children.

Ensure that the flashlight cannot be turned on when stored or being transported. If the lamp is activated while in a case or any container, the lamp could overheat and cause damage to surrounding materials.

Examine battery quality and appearance before use each time and make sure that there is no leaking or any deformation. Dispose appropriately if there is a problem.

The batteries are pre-charged by the manufacturer, and cannot be recharged. Recharging can cause battery leakage or, in some cases, high-pressure rupture. Inadvertent charging can occur if a battery is installed backwards.

Do not use rechargeable batteries in the light, unless the product specifications clearly states that rechargeable batteries can be used.

Install batteries by aligning the + and - signs marked on the battery with the + and - signs marked on the battery chamber in the light.

Turn off the light when not in use to conserve battery power.

Make sure to turn off the light or disconnect the pressure switch before inspecting bulb and battery if the light cannot be turned on.

Keep batteries cool and dry. Always remove batteries from light after use. Leaving battery in the light without use for long period of time may cause damage or danger.

Always replace batteries with the exact type and size specified for the light.

Always replace the whole set of batteries at the same time. Never mix new and used batteries in the same light.

Never deliberately short circuit batteries. Prolonged short circuit will cause the battery to lose energy and result in significant temperature increase.

Keep battery compartment clean and keep any metallic object away from the battery.

Lithium batteries can explode or cause burns if disassembled, shorted, recharged, exposed to water, fire, or high temperatures. Do not place loose batteries in a pocket, purse, or other container containing metal objects. Do not mix new with used batteries or mix required batteries with other types of battery. Do not store batteries with hazardous or combustible materials. Store in cool, dry, ventilated area. Follow applicable laws and regulations for disposal.



Do not use rechargeable batteries unless explicitly specified in this manual. Using rechargeable batteries may result in Bulb/IRB\* damage.

LT-ELEDC01	
Length	4.72" (120mm)
Width	1.1" (28mm)
Weight with Battery	7oz (200g)
Bulb Type	20mm IRB with CREE LED
Output	High: 400 Lumen Low: 20 Lumen
Focus	Preset Flood
Waterproof	Rated to IPX7 Standards; Will Perform at 1 Meter Depth for 30 Minutes
Battery Operating Time	50Mins (400 Lumen) 24 Hrs (20 Lumen)
Quantity/Battery	2 x CR123A or 1 x 18650 Rechargeable Battery

Specifications

## Component Illustration

Momentary/Constant On/Off Push Button Tail Cap

Lanyard Loop

Removable Pocket Clip for Bezel Head Up or Down Carry



Matte Black Aircraft Aluminum Construction

CR123A & 18650 Rechargeable Compatible

Multi-Functional CREE LED Illumination: High, Low, SOS, and Strobe

\*IRB - Integrated Reflector and Bulb

Fig. 1-1



Fig. 1-2



Fig. 1-3



Fig. 2-1



Fig. 2-2



## Installation & Operation

### Battery Installation

1. Turn the flashlight's push button end cap counterclockwise to remove it and gain access to the battery compartment (Fig. 1-1)
2. Insert two CR123A batteries or a single 18650 rechargeable battery with the + side facing down into the battery compartment. (Fig. 1-2)
3. Reinstall the push button end cap by turning it clockwise until securely tightened. (Fig. 1-3)

### ON/OFF OPERATIONS:

#### a. Constant On/Off


1. Completely depress the push button end cap until it clicks to keep the flashlight on. Another complete press will turn the flashlight off. (Fig. 2-1)

#### b. Momentary On/Off

1. Lightly press and hold down the push button end cap to keep the flashlight on for the duration in which it is held down. (Fig. 2-2)

### c. Toggling Between Modes: High, Low, SOS, and Strobe

1. 400 lumen high output is the flashlight's default mode. If the flashlight is off for more than 5 seconds it will return to default.
2. Lightly and quickly press the push button end cap twice to enter 20 lumen low output mode.
3. Lightly and quickly press the push button end cap three times to enter SOS mode.
4. Lightly and quickly press the push button end cap four times to enter Strobe mode.

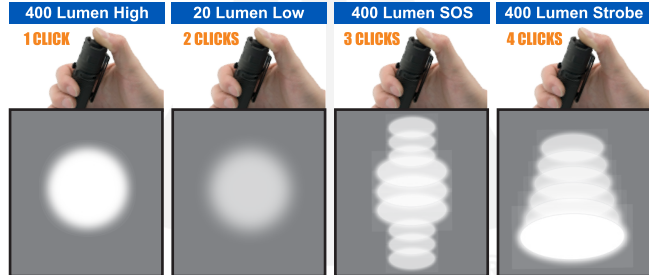

## Maintenance

1. Maintain the metal surface of the flashlight by removing any dirt or sand with a soft brush to avoid scratching the finish.
2. Store the flashlight in a cool dry place when not in use. Be careful to avoid contact with acid, alkaline or corrosive chemicals.
3. Do not store the flashlight in areas of extreme high or low temperatures.
4. Outside of lightly lubricating the battery compartment cap o-ring, do not attempt to lubricate any other part of the flashlight.
5. Do not disassemble the flashlight any further than what is explicitly mentioned in this owner's manual.

## The Best Never Rest Warranty - Lifetime

Leapers, Inc. warrants that all UTG & UTG PRO products conform to published specifications and are free from defects in material and workmanship. We will repair or replace defective products for the duration of the product's life span. Our dedicated and professional in-house customer service team will go above and beyond to make things right and provide the best in-class customer service experience you expect to receive. Our warranty does not extend to products damaged from misuse, accidental damage, negligence, natural disasters/accidents, or unauthorized repair or alteration. For warranty service, please submit your inquiry by visiting our customer service page on our website at [www.leapers.com](http://www.leapers.com) or give us a call at 734-542-1500. A Return Authorization Number (RMA) must be assigned before returning any products for warranty service.

## Disclaimer and Limitation of Liability

Leapers is pleased to offer suggestions of the use of its products, however Leapers neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by Leapers, whether verbal or written.

EXCEPT FOR THE EXPRESS WRITTEN WARRANTY SPECIFICALLY SET FORTH ABOVE, ALL EXPRESS AND IMPLIED REPRESENTATIONS AND WARRANTIES ARE HEREBY DISCLAIMED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, NON-INTERFERENCE, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, OR WARRANTY OF ACCURACY OF ANY INFORMATION PROVIDED WHETHER WRITTEN OR ORAL. ALL WARRANTIES ARISING FROM ANY COURSE OF DEALING, LAW, USAGE OR TRADE PRACTICE ARE HEREBY EXPRESSLY EXCLUDED TO THE EXTENT ALLOWED BY LAW. TO THE EXTENT AN IMPLIED WARRANTY CANNOT BE EXCLUDED, SUCH WARRANTY IS LIMITED IN DURATION TO ONE YEAR. SOME STATES OR JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

UNDER NO CIRCUMSTANCES IS LEAPERS, OR ITS SUPPLIERS OR RESELLERS LIABLE FOR ANY OF THE FOLLOWING EVEN IF INFORMED OF THEIR POSSIBILITY: 1) THIRD PARTY CLAIMS AGAINST YOU FOR DAMAGES; 2) SPECIAL, INCIDENTAL, OR INDIRECT DAMAGES OR FOR ANY ECONOMIC CONSEQUENTIAL DAMAGES; OR 3) LOST PROFITS, BUSINESS REVENUE, GOODWILL, OR ANTICIPATED SAVINGS. SOME STATES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.